Strider Compact

INSTRUCTION MANUAL

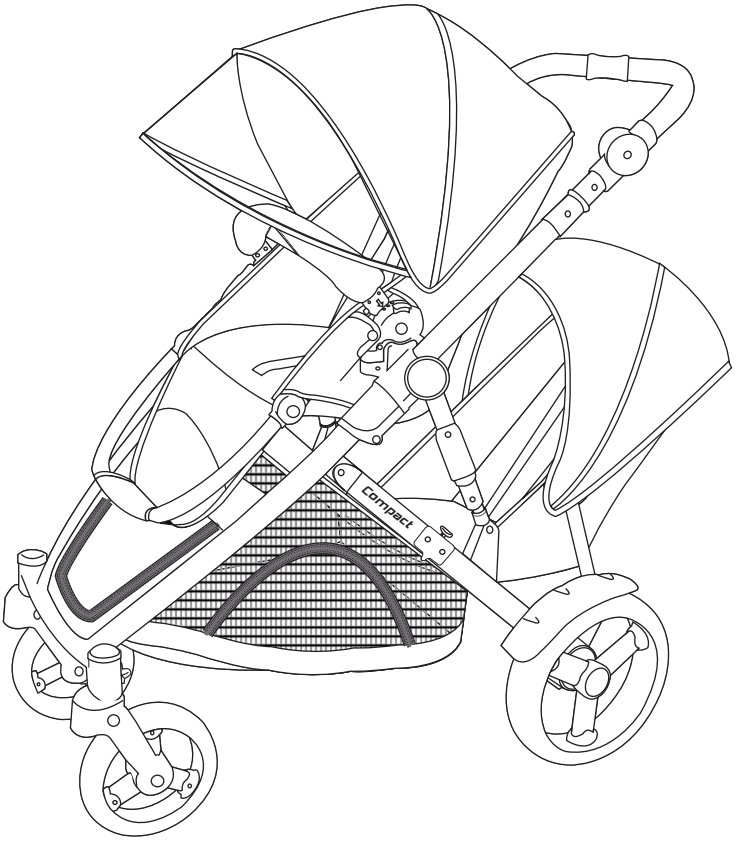

IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE.
Note: Second Seat, Bassinet, Infant Carrier & Footmuff are all sold separately.

Britax | Steelcraft

INDEX

Stroller Features **4**
Quick Reference Guide to Compact Single Mode Configurations **6**
Quick Reference Guide to Compact Double Mode Configurations **7**
Folding with the Second Seat Warning **8**
1 Stroller **9**
1.1 Stroller General Warnings 10
1.2 Stroller Parts 12
1.3 Stroller frame opening 13
1.4 To fit and remove the wheel guards 14
1.5 Rear wheel fitting and removal 14
1.6 Front wheel fitting and removal 15
1.7 Swivel/fixed front wheel operation 16
1.8 To operate the brake 16
1.9 To adjust the pivotal handle - 7 positions 17
1.10 To fit the accessory bag 17
1.11 Fitting the stroller seat to the frame 19
1.12 To fit the arm bar 20
1.13 Adjusting the backrest 21
1.14 Stroller seat removal 21
1.15 To face the seat in opposite direction 22
1.16 To adjust the head pillow & shoulder harness height 23
1.17 To fit, use and remove the canopy 23
1.18 Harness adjustment 24
1.19 Tether strap 28
1.20 Fitting the reversible seat pad 28
1.21 To use the reversible shoulder pads 29
1.22 Adjusting the leg support 29
1.23 Fitting the boot cover 30
1.24 To use the basket 30

INDEX

1.25 To use the foot muff 31
1.26 Fitting the mesh cover 32
1.27 Fitting the rain cover 34
1.28 To fold/close the Stroller 36
Optional Accessories (Bassinet, Infant Carrier & Second Seat) 39
2.1 **Bassinet Warnings** 40
2.2 Bassinet Parts 40
2.3 Bassinet assembly, fitting & removal 41
3.1 **Infant Carrier Warnings** 44
3.2 Infant Carrier fitting and removal 44
4.1 **Second Seat Warnings** 47
4.2 Second Seat Parts 48
4.3 Fitting Second Seat to the stroller 49
4.4 To adjust into seating positions 50
4.5 To fit, use and remove the canopy 50
4.6 Harness adjustment 51
4.7 Adjusting the head pillow height position 54
4.8 Using Reversible shoulder pads 55
4.9 Fitting the Boot Cover 55
4.10 Folding the Second Seat with the frame 56
4.11 Removing the Second Seat from the frame 57
4.12 To use the adaptors 58
4.13 Install the Stroller Seat using the adaptors 59
4.14 Install the Infant Carrier using the adaptors 59
4.15 Fitting and removing Soft Goods from the second seat frame 60
4.16 Fitting and removing Infant Carrier from the second frame 62
4.17 Refit and remove the softgoods to the Second Seat 64
Stroller Folding Configurations 66
Care & Maintenance 67

STROLLER FEATURES

S1. Adjustable & removable canopy
S2. Peek a boo window
S3. Pivotal handle
S4. Tether Strap
S5. Frame fold mouldings (on both sides)
S6. Canopy mesh (under zip)
S7. Stroller seat release buttons (on both sides)
S8. Frame sockets (on both sides) accepts Stroller, seat, Infant Carrier, bassinet or adaptors.
S9. Frame lock
S10. Wheel guards
S11. Side access zip pocket (on both sides)
S12. UV Sun Visor
S13. Adjustable head pillow
S14. Reversible seat pad
S15. Arm bar
S16. Removable & reversible Stroller Seat
S17. 5 point harness
S18. Crotch pad
S19. Adjustable footrest
S20. Front access zip pocket
S21. Front wheel release
S22. Swivel wheel lock

STROLLER FEATURES cont...

S23. Canopy window
S24. Backrest recline lever
S25. Back pocket
S26. Accessory bag
S27. Brake
S28. Rear wheel release
S29. Mouldings (for attachment to Second seat connecting pins)
S30. Second lock (for Second seat)
S31. Lower mouldings (for attachment to second seat frame)

**Accessory bag and Stroller seat have been removed from the frame shown on the right.*

QUICK REFERENCE GUIDE - SINGLE MODE

Stroller - Forward Facing
Page: 19

Stroller - Rear Facing
Page: 22

Bassinet
Page: 41

Infant Carrier - Rearward Facing
Page: 45

Shown with optional accessories (sold separately)

QUICK REFERENCE GUIDE - DOUBLE MODE

Stroller Forward Facing + Second Seat
Pages: 19 + 49
With Adaptors: 58 + 59

Stroller Forward Facing + Infant Carrier
Pages: 19 + 60
With Adaptors: 58 + 59

Infant Carrier + Second Seat
Pages: 45 + 49
With Adaptors: 58 + 59
Recommended to use the adaptors in this mode

Infant Carrier + Infant Carrier
Pages: 45 + 60
With Adaptors: 58 + 59

Shown with optional accessories (sold separately)

FOLDING WITH THE SECOND SEAT WARNING

WARNING: INCORRECT FOLDING MAY CAUSE DAMAGE THE STROLLER & FRAME. PLEASE FOLLOW THE FOLDING INSTRUCTIONS CAREFULLY.

NOTE: If folding the Stroller with the Second Seat attached, you must adjust the stroller pivot handle to the regular or highest position, to prevent the handle from coming in contact with the second seat and causing damage to the stroller. Please refer to section 4.10 for detailed folding instructions.

REGULAR POINT

HIGHEST POINT

LOWEST POINT

SECTION ONE: STROLLER

1.1 STROLLER GENERAL WARNINGS

⚠WARNINGS: TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- RETAIN FOR FUTURE REFERENCE.
- READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS STROLLER.
- ALWAYS FOLLOW THE INSTRUCTIONS.
- THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.
- FOLLOW THE MANUFACTURERS INSTRUCTIONS.
- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- USE THE HARNESS AT ALL TIMES. WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- Check that all safety locks are engaged before placing a child in the stroller.
- Ensure your child is secured with a correctly adjusted safety harness.
- Use the tether strap to prevent the stroller from rolling away.
- Never let go of the stroller when parked on an incline because it may slide or tip over. Always park on a flat surface.
- Remove the child from the stroller before going up or down stairs or escalators.
- Do not lift the stroller by the armrest because it may disengage.
- Do not allow children to stand on the seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.

WARNINGS: TO AVOID INJURY OR DEATH:

- Do not run while using this product.
- To prevent the risk of the stroller catching fire, do not park it near an exposed heat source such as a radiator, an open fire or a barbecue, etc.
- Always lock swivel wheels when on rough surfaces as this will help eliminate wheel wobble.
- Always raise the leg support (where fitted) to its highest position when transporting a baby. This will reduce the risk of the baby falling out through the front of the stroller.
- It is unsafe to use accessories other than those tested and approved by Britax.
- For maximum safety only use accessories designed for this stroller.
- Do not place more than 4kg in the basket, or 1kg in the seat backrest pocket, 1kg in the Bassinet pocket, or 1kg in the accessory bag.
- The maximum weight of the child using this product is not to exceed 20kg for the Stroller, 9kg for the Bassinet, 9kg for the Infant Carrier or 17kg for the Second Seat.

FOR WARNINGS ON ACCESSORIES - REFER TO THEIR INDIVIDUAL SECTIONS IN THIS BOOK. THE MAXIMUM WEIGHT VARIES FOR EACH ACCESSORY.

IMPORTANT

THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN SIX MONTHS OLD. THE LOWEST RECLINE POSITION SHOULD BE USED TO TRANSPORT BABIES, AND THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.

SAFETY WARNING

The sun is very strong. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

1.2 STROLLER PARTS

Stroller frame

Stroller seat (with head pillow)

Canopy

Arm bar

Boot cover

Reversible
Seat pad

Shoulder pads

Accessory bag

Mesh cover

Rain cover

Wheel guards

Rear wheels

Front wheels
(4 wheel model)

1.3 STROLLER FRAME OPENING

A Lay the frame on a flat surface.

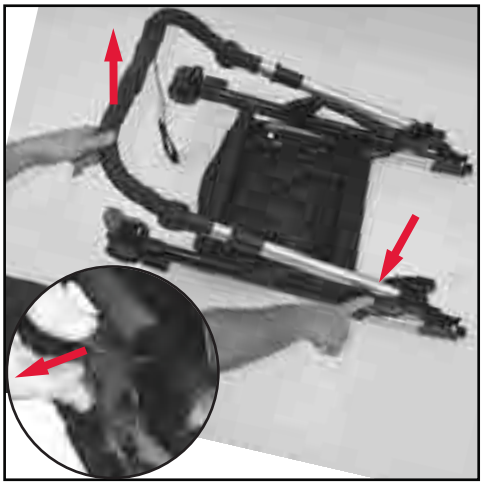

B Release the frame lock and lift up the handle to partially open frame.

C Continue to lift the handle up to open the frame until the left and right side frame mouldings engage and lock together.

D Push down on the handle to confirm the frame is locked open.
NOTE: To fold/close the frame see Section 1.28.

1.4 FIT & REMOVE THE WHEEL GUARDS

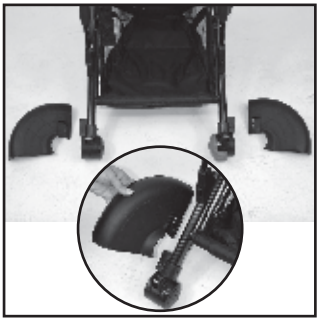

A Position the left and right guards beside the frame as shown.

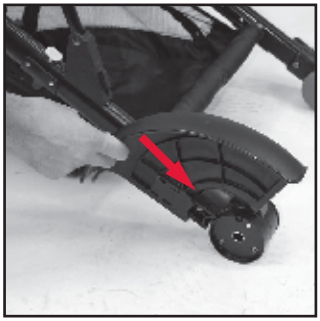

B Fit each guard onto the moulding at the base of the leg tubes. Push down until they lock into position.

C Pull on each guard in the direction shown, to make sure they are locked on correctly.

1.5 REAR WHEEL FITTING & REMOVAL

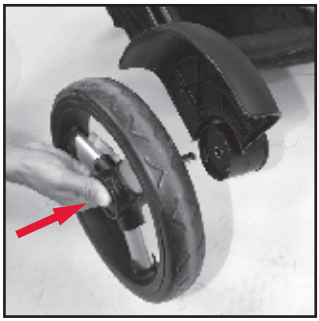

A To fit the rear wheels, align the wheel axle/rod with the hole in the wheel moulding. Press in and hold the central button, then push the rear wheel fully into the wheel moulding.

B Release the central button, then pull on the rear wheel to make sure it is locked on. Repeat steps A & B to fit the other rear wheel.

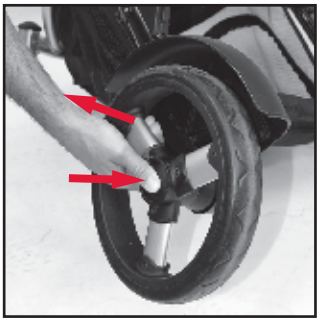

C To release the rear wheels, press in and hold the central button. Then slide the wheel out and remove. Repeat for the other side.

1.6 FRONT WHEEL FITTING & REMOVAL

NOTE: Tip the frame backwards for more convenient assembly.

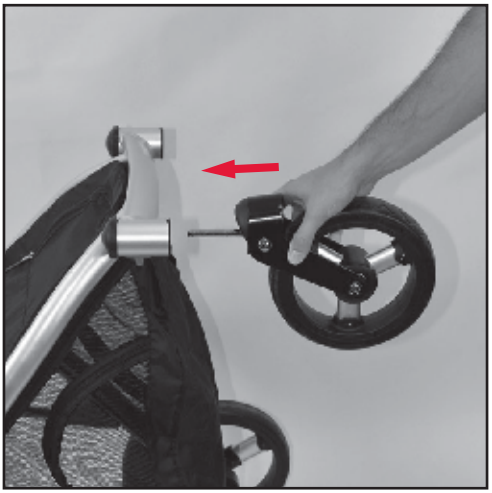

A Take each front wheel assembly and push the axle into the wheel housing, until it locks in.

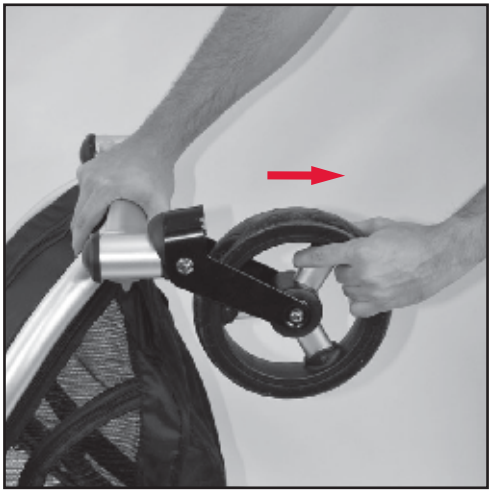

B Pull on both front wheel sets to make sure they are locked on.

C To remove the wheel assembly, turn top knob to the left to unlock and release the wheel.

1.7 SWIVEL/FIXED FRONT WHEEL OPERATION

NOTE: Always lock the front swivel wheels when on uneven surfaces.

A For swivel wheel mode, slide both red latches up until they lock it into position.

B To lock the front wheels into the fixed position, slide both red latches down until they lock.

C The front wheels will automatically lock into the fixed position when you move the Stroller forward by approximately one metre.

1.8 TO OPERATE THE BRAKE

WARNING - Always apply the brakes when parking the Stroller. The Stroller may roll away even if left unattended for a few moments.

A To lock both rear wheels, press the red brake lever all the way down until you hear a click. The indicator will change to red. Push the Stroller back and forth to confirm the wheels are locked.

B To unlock both rear wheels, press the red brake lever all the way down until you hear a click. The indicator will change to green.

1.9 TO ADJUST THE PIVOTAL HANDLE

7 POSITIONS

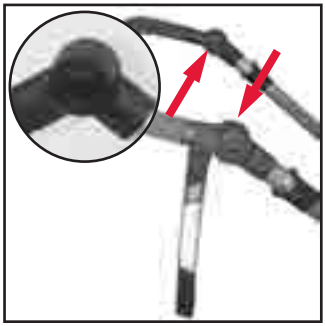

A There is an adjusting button on the inside of each handle moulding.

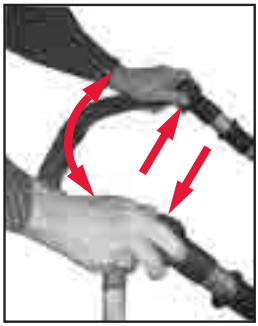

B Press both buttons in together and hold. Now rotate the handle up or down to the desired height position.

C When the desired height position has been achieved, release both buttons.

1.10 TO FIT THE ACCESSORY BAG

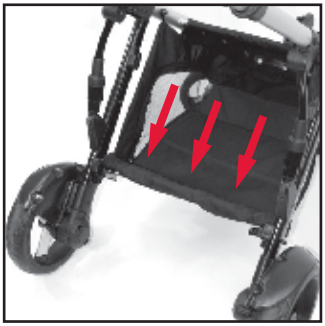

A The bag firstly needs to be attached to the hook and loop tab on the inside of the Stroller basket.

B Hold the bag up by the black back flap on the rear side of the bag.
Note: the hook and loop tab on the edge of the flap.

C Attach the hook and loop tab to the hook and loop tab on the inside of the basket. This will help to keep it in place.
Note: this flap also contains two pockets.

1.10 TO FIT THE ACCESSORY BAG Cont...

D Now thread each hook and loop tab through the frame moulding brackets as shown.

E Attach each strap to the hook and loop tab sewn onto the bag to hold in place.

F The accessory bag is now ready for use.

NOTE: Remove the bag when using the second seat.

1.11 FITTING THE STROLLER SEAT TO THE FRAME

WARNING - Always remove your child from the Stroller seat before installing, removing or changing seat direction.

NOTE: The seat is reversible so it can face in either forward or rearward position.

A Hold the Stroller seat over the frame.

B Align the Stroller seat mouldings on both sides, over the frame connection sockets located in the middle of the Stroller.

C Push the Stroller seat down until both seat mouldings are locked into the frame sockets.

D Pull up on both sides of the Stroller seat to make sure it is securely locked into the Stroller frame.

1.12 TO FIT THE ARMBAR

⚠ CAUTION: When Child is in the Stroller, keep the arm bar attached to the frame at all times.

A One side at a time, align the arm bar pin with the frame moulding as shown.

B Press in and hold the engaging / release button, then insert the pin all the way in.

C Release the button, then pull on the arm bar to make sure it is engaged. Repeat steps A, B & C for the other side.

D To release the arm bar, press in and hold the release button located under the arm bar connector, then pull out the arm bar.

E Rotate the arm bar clear of the Stroller seat to assist with putting a child in the Stroller.

F Lock the arm bar back into position after fastening the child in the harness. Ensure the arm bar is correctly installed. The 'Caution' text must appear on the right hand side so it is possible to read (not upside down).

1.13 ADJUSTING THE BACKREST

CAUTION: Ensure that your child's limbs are inside the seating area before adjusting the backrest. be prepared to support your child's weight when adjusting the backrest.

A To adjust up or down, fully lift the adjusting lever all the way up.

B Continue to hold the lever up and adjust the seat to any one of three positions.

C There are 3 indicated seat positions while the seat is facing forward or rearward.
1. Upright position
2. Semi recline position
3. Layback position

1.14 STROLLER SEAT REMOVAL

WARNING - Always remove your child from the Stroller seat before installing, removing or changing seat direction.

A Hold the seat or arm bar on both sides with your hands. Then with your finger or thumbs, press down and hold the grey buttons.

B While holding the grey buttons, lift the seat out of the frame.

1.15 TO FACE SEAT IN OPPOSITE DIRECTION

WARNING - Always remove your child from the Stroller seat before changing seat direction.

A Refer to section 1.14 for removing the seat from the frame.

B Turn the Stroller seat around to face handle. Refer to section 1.11 for fitting the seat to the frame.

WARNING - IT IS NOT RECOMMENDED TO USE THE TOP SEAT FACING IN THIS POSITION IF YOU ARE USING EITHER THE SECOND SEAT OR THE INFANT CARRIER IN THE LOWER FRAME POSITION.

1.16 TO ADJUST THE HEAD PILLOW HEIGHT

NOTE: The head pillow has a small height adjusting range for additional comfort.

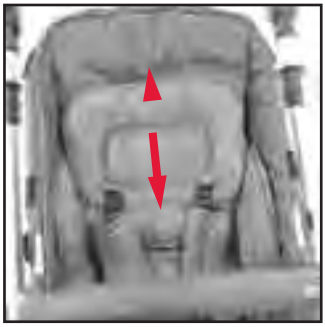

A The head pillow height is adjustable via the pile strip on the seat back. Adjust the head pillow height to suit the chosen shoulder strap slots.

1.17 TO FIT, USE & REMOVE THE CANOPY

A To attach the canopy, adjust the backrest to the upright position, then slide the canopy mouldings on the frame mouldings until they connect together. Pull up to confirm they are locked on.

B Attach the canopy hook strips to the pile strips around the top and sides of the frame for a secure fit.

C To adjust the canopy, open by pulling forward, or close by pushing it backward.

1.17 TO FIT, USE & REMOVE THE CANOPY cont...

D For extra protection, pull visor out from under the front of canopy.

E To expose the mesh section of the canopy, unzip the center section.

F The zip should be fully unzipped to expose the centre mesh section. Use the fabric to expose or enclose the mesh section. Reverse the above steps to close the mesh section.

G The window cover is kept in place by a hidden magnet located at the bottom of the window cover.

H To open the window cover, simply lift the cover and over the centre bow.

I To remove the canopy, pull the canopy off the frame mouldings.

1.18 HARNESS ADJUSTMENT

WARNING: USE THIS HARNESS AT ALL TIMES. WHEN NOT IN USE ALWAYS DISCONNECT THE SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.

A five-point harness is provided to restrain your child. Buckle tongues separate for added safety. To reconnect buckle tongues and to secure the child in the harness, please follow below steps carefully.

1.18 HARNESS ADJUSTMENT cont...

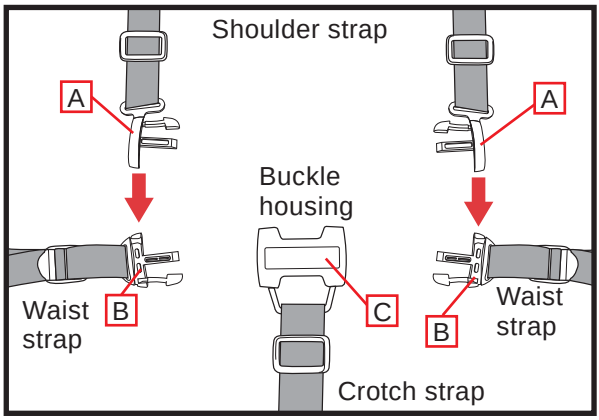

A Position the shoulder strap tongue (A) on the top of the waist buckle tongue (B) one side at a time.

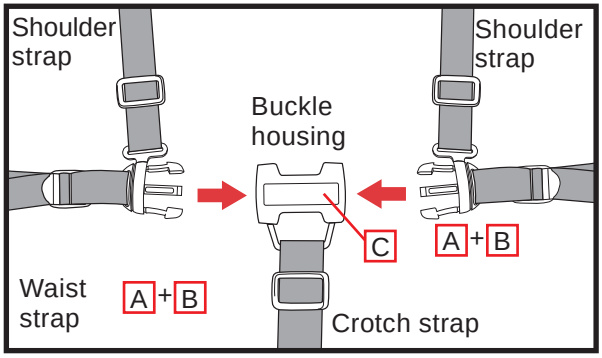

B Push the buckle tongues combinations (A+B) into the buckle housing (C) until the buckle tongues lock into position.

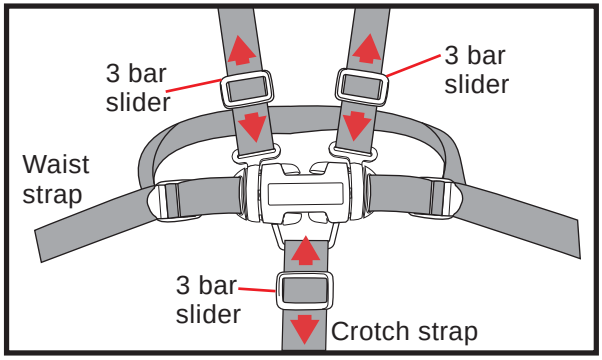

C Tighten or loosen shoulder and crotch straps by sliding up and down the 3 bar sliders.

1.18 HARNESS ADJUSTMENT cont...

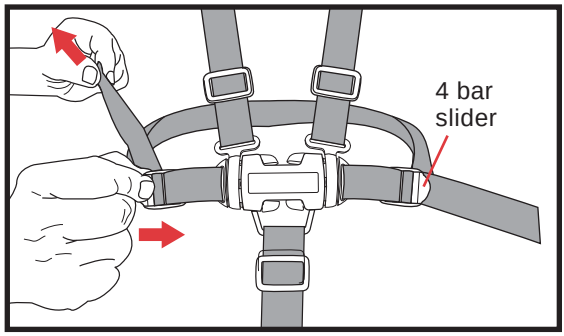

D Tighten or loosen the waist straps, hold and lift the 4 bar slider and then pull the harness strap, to adjust to the desired fit.

E The waist strap needs to fit firmly around the child. Always adjust the harness strap when changing the seating position of the child.

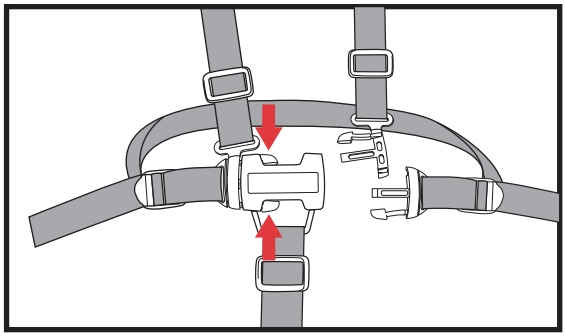

F To release the buckle, carefully squeeze the top and bottom buckle tongues.

1.18 HARNESS ADJUSTMENT cont...

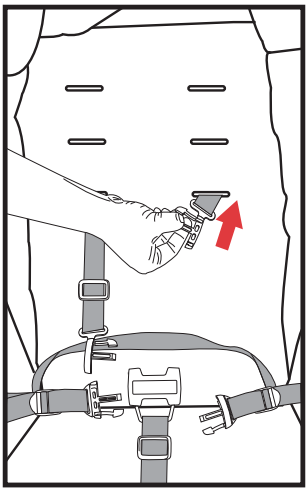

G The Stroller Seat has 3 sets of harness slots at different heights to accommodate the child. To change the shoulder harness height, push the shoulder harness tongue out of the current harness slot and through the back of the seat fabric.

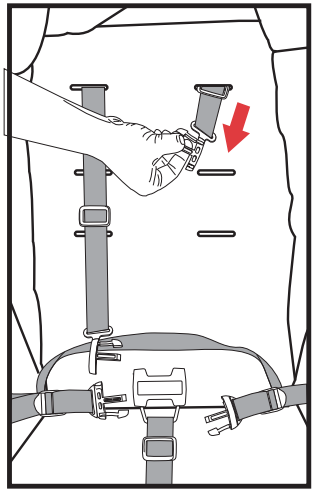

H To reposition harness, pull the shoulder buckle tongue through the desired slot.

1.19 TETHER STRAP

WARNING- USE THE TETHER STRAP TO PREVENT THE STROLLER FROM ROLLING AWAY.

NOTE: A tether strap is fitted to this Stroller, always place the loop over desired wrist when using the Stroller.

A Slide your hand through the tether strap whenever you use the Stroller.

1.20 TO FIT THE REVERSIBLE SEAT PAD

NOTE: To assist with installing, release one side of the arm bar, see section 1.12 (D) and release the harness buckles.

A Fit the reversible seat pad by sliding it under the shoulder harness and head pillow.
Note: Locate wider part of pad towards the head.

B Put the both waist harness straps through button hole on the seat pad.

C The seat pad is reversible.

1.21 TO USE THE REVERSIBLE SHOULDER PADS

NOTE: The shoulder pads are reversible.

A Fit the reversible shoulder pads by fitting around the harness shoulder strap and attach the hook and pile.

B Repeat for the other reversible shoulder pad.

C The reverse side of the shoulder pad has a different fabric pattern. To reverse, undo the hook and pile and reattach on the reverse side.

1.22 ADJUSTING THE LEG SUPPORT

A To lower or raise leg support, press in and hold both left and right buttons.

B While holding both left and right buttons, tilt leg support up or down to the desired position.

1.23 TO FIT THE BOOTCOVER

A Raise the leg support to the horizontal position. Hook the boot cover 'pocket' under the leg support.

B Pull the top of bootcover under the arm bar and then back over the top.

C Connect the press studs to keep in place. The Boot cover is now ready for use.

NOTE: Boot cover can be used on second seat, see section 4.9.

1.24 TO USE THE BASKET

NOTE: When a child is in the Second Seat, basket access is recommended only from the sides, or from the front.

A Access is available from either side by undoing the zippers.

B Access is available from the front by undoing the zipper.

C Access is available from the rear of the Stroller.

1.25 TO USE THE FOOT MUFF*

**PURCHASED SEPARATELY*

NOTE: Always secure the harness through the strap holes before use.

NOTE: Remove all accessories before installing the foot muff.

A To fit the foot muff, ensure the head pillow height is correctly adjusted for your child, (section 1.16). Fold the canopy back, disengage one side of the arm bar and rotate to the side of the frame (section 1.12 (D)).

B Undo both sides of the buckle prongs from the buckle housing. Remove the reversible seat pad & shoulder pads.

C Unzip the top section of the Foot muff and set aside. Place the padded bottom section into the Stroller seat.

D Thread both waist strap buckle tongues through the pair of slots in the middle section of the foot muff.

E Thread the shoulder strap buckle tongues through the appropriate shoulder strap slots in the foot muff. There are 3 different height slots.

F Thread the buckle housing & crotch pad separately through the crotch slot in the foot muff. Fit the shoulder pads if desired.

1.25 TO USE THE FOOT MUFF cont...

G Place the child in the Stroller and connect the harness buckle. Ensure the harness buckle is correctly engaged (see section 1.18). Zip together the top & bottom sections of the foot muff.

H Engage the other side of the arm bar (see section 1.12).

1.26 TO FIT THE MESH COVER

A To fit the mesh cover over the Stroller seat, place the elastic section of the mesh cover over the front section of the canopy.

B Lift up the end of the canopy and wrap the elastic loops around the canopy frame as shown and attach together using the clip.

C When fitted to the Stroller, the front section of the meshcover will rest on the leg support.

1.26 TO FIT THE MESH COVER cont...

D Lift the top fabric cover as required or lower for most protection. The mesh cover can be used on both seat directions.

E To fit the mesh cover over the bassinet, place the elastic section of the mesh cover over the front section of the canopy.

F Wrap the elastic loops and clips around the hook and pile strips and attach together using the clip.

G To fit the mesh cover over the Second Seat, place the elastic section of the mesh cover over the front section of the canopy.

H Wrap the elastic loops and clip around the bars at both sides of the Second Seat.

I Attach using the clip.

1.27 TO FIT THE RAIN COVER

A To fit the rain cover to the Stroller - Place over the Stroller canopy as shown. Loop the elastic section over the Stroller seat leg support, then pull the rear rain cover section down between the handle.

B Join the hook and pile around the handle tube.

C The rain cover can be fitted to the Stroller seat when in forward or rear facing mode.

D To fit the rain cover to the Stroller and Second Seat - Follow step A, then pull the rear rain cover section down between the handle and over the back of the Second Seat as shown above. Attach the hook and pile as described in B above.

E To fit the rain cover to the Infant Carrier - Place over the Infant Carrier canopy as shown. The elastic section will hang overt he front of the stroller, then pull the rear rain cover section down between the handle.

1.27 TO FIT THE RAIN COVER cont...

F Join the hook and pile around the handle tube.

G To fit the rain cover to the Infant Carrier and Second Seat or second Infant Carrier - Follow Step E, but ensure to pull the rear rain cover section over the back of the Second Seat or lower Infant Carrier as shown. Join the hook and pile around the handle tube.

H Rain cover fitted over the two Infant Carriers shown above.

I To fit the rain cover to the Bassinet- Place over the Bassinet canopy as shown. Loop the elastic over the front of Bassinet.

J Join the hook and pile around the handle tube.

1.28 TO FOLD/CLOSE THE STROLLER

- Remove the Bassinet or Infant Carrier if connected to the frame prior to folding.
- The Second Seat can either be removed or folded up prior to folding.
- The rain cover must also be removed if fitted.

NOTE: Stroller Seat and wheels can be removed to reduce the total folded size. See sections 1.6 & 1.14 for reference. With Stroller Seat attached, folding the leg support will also help to reduce the folded size.

FOLDING TIPS

1. It is recommended for easier handling, to take the Stroller seat off first. Then fold the frame and put both seat and frame in the car.

2. For smaller cars it may also be convenient to simply remove the rear wheels as well.

A Engage rear brakes. Remove all objects from seat back pocket and basket and close the canopy. Raise the handle up one or two positions (as shown) to avoid contact with the wheels when folded.

B Remove the Stroller Seat from the frame. Hold the seat or arm bar on both sides with your hands. Then with your finger or thumbs, press down and hold the grey buttons. While holding the grey buttons, lift the seat off the frame.

WARNING: INCORRECT FOLDING MAY CAUSE DAMAGE TO THE STROLLER & FRAME. PLEASE FOLLOW THE FOLDING INSTRUCTIONS CAREFULLY.

- Release the front wheels into swivel mode to fold.
- Ensure the front wheels are in swivel mode, so the front wheels will automatically position under the stroller during folding.

4 wheel model

C For swivel wheel mode, lift the swivel latch up on both front wheels until they lock into position.

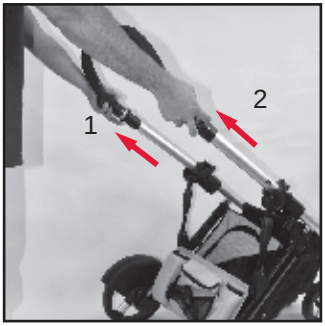

D Pull release mouldings 1 & 2 all the way up and hold to release the frame locks.

E Push down on the handle and the frame will begin to fold.

F Fold all the way down until the frame lock engages.

1.28 TO FOLD/CLOSE THE STROLLER cont...

G Frame lock engaged.

H The two separate components shown after folding.

I Separation of the Stroller seat and frame promotes easier handling and storage.
NOTE: Make sure the frame lock is engaged before lifting up and always bend the knees when lifting.

If you have chosen not to remove the Stroller Seat, follow the procedure below.

Note: Ensure the Stroller seat is forward facing. This will achieve a more compact fold.

J Follow step A.
If seat unit is attached and in child facing away from parent mode, then adjust the backrest to the most upright position.

K If seat unit is attached and in child facing parent mode, then adjust the backrest to most reclined position.

L Follow steps C, D & E. Then fold all the way down until the frame lock engages (frame lock shown in step G).

Section Two: Bassinet

Section Three: Infant Carrier

Section Four. Seat

OPTIONAL ACCESSORIES

2.1 BASSINET WARNINGS

⚠WARNINGS:

PLEASE FOLLOW THESE WARNINGS IF YOU ARE USING THESE ACCESSORIES.

- THE COMPACT & STRIDER BASSINETS ARE THE ONLY BASSINETS DESIGNED TO FIT THE COMPACT STROLLER.
- REMOVE STROLLER SEAT OR INFANT CARRIER FROM THE FRAME BEFORE FITTING BASSINET.
- ALWAYS REMOVE YOUR CHILD FROM THE BASSINET BEFORE FITTING OR REMOVING FROM THE STROLLER FRAME.
- THE BASSINET MUST ALWAYS FACE TOWARDS THE HANDLE.
- THE BASSINET MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.
- DO NOT LIFT STROLLER BY THE BASSINET.
- DO NOT USE THE BASSINET ONCE THE CHILD CAN SIT UP UNAIDED.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS PRODUCT IS NOT TO EXCEED 9 KG.

2.2 BASSINET PARTS

Bassinet Frame

Bassinet Liner

Bassinet Mattress

Bassinet Boot cover

2.3 BASSINET ASSEMBLY, FITTING & REMOVAL

A To assemble bassinet, locate straps in the centre of the frame support rods and pull straps slowly outwards until each rod slides and locks under all 4 clips.

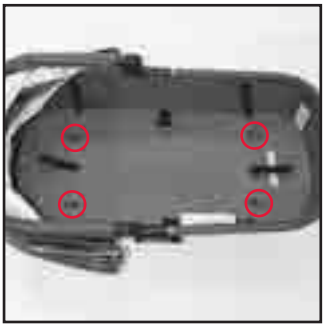

B Frame support rods are locked under all four clips.

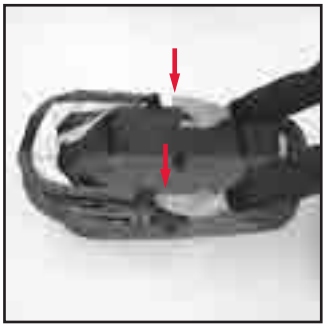

C Push down lightly on the top edges of the bassinet to check that the frame supports are firmly locked in place.

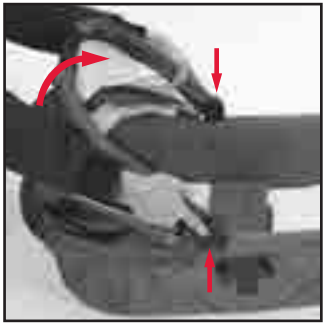

D Open canopy by pressing and holding each button on the outside of canopy pivot joint before rotating carry handle bar to vertical position.

E Fit the liner by aligning the opening with the main locking lever and stretching it over both corners of the Bassinet. Ensure body band faces upwards.

F Fasten hook and loop strip just under the main locking lever.

2.3 BASSINET ASSEMBLY, FITTING & REMOVAL cont...

G Fasten hook and loop tabs around the handle mouldings and stretch the liner over the other two corners of the bassinet.

H Fold canopy down (see section 2.3 (D)). Insert the pad into the bassinet with head rest located at the canopy end.

I Attach hook and loop tabs on canopy to the liner on both side and in 2 places near the main locking lever.

J To expose the mesh section of the canopy, fully unzip the center section. Use the fabric to expose or enclose the mesh section.
To close the canopy reverse the above procedure.

K Place the bassinet boot cover over the bassinet and attach hook on the each side of the boot cover to loop on the each side of the canopy as shown.

2.3 BASSINET ASSEMBLY, FITTING & REMOVAL cont...

NOTE: The bassinet can only be installed rearward (facing mother position) on the Stroller frame. The frame will not fold with bassinet installed so it must be removed before folding.

L Line up plastic moulding on sides of Bassinet with sockets in the middle of Stroller frame.

M Lower the Bassinet all the way down until it engages into the sockets on both sides.

N Ensure Bassinet is securely locked on by trying to pull up.

O To remove Bassinet from the Stroller, firmly lift and hold the main lever up. Once released, lift the bassinet out of the Stroller.

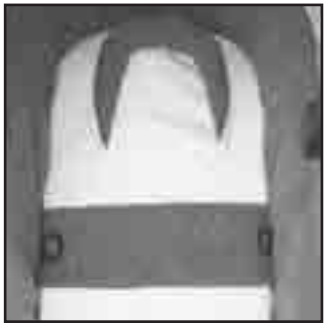

NOTE: A body band is also installed in the base of the Bassinet for optional use. To use the body band, remove the mattress, open the body band, and then place the mattress back into the Bassinet. When not in use store body band under the mattress.

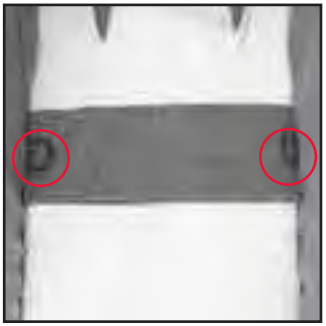

NOTE: D-rings in the base of the bassinet for optional baby harness installation.
A Baby harness is not supplied but can be purchased separately at an independent baby store.

3.1 INFANT CARRIER WARNINGS (Optional Accessory)

⚠WARNINGS:

PLEASE FOLLOW THESE WARNINGS IF YOU ARE USING THESE ACCESSORIES.

- THE STEELCRAFT & STRIDER INFANT CARRIERS ARE THE ONLY COMPATIBLE INFANT CARRIERS DESIGNED TO FIT COMPACT STROLLER AND COMPACT SECOND SEAT FRAME.
- THE INFANT CARRIER OR INFANT CARRIERS MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STROLLER FRAME OR SECOND SEAT FRAME.
- WHEN LOCKED ONTO THE STROLLER FRAME, THE INFANT CARRIER MUST ONLY BE USED IN THE REARWARD FACING (FACING THE MOTHER) POSITION, FITTED FACING TOWARD THE STROLLER HANDLE.
- WHEN LOCKED ONTO THE SECOND SEAT FRAME, THE INFANT CARRIER MUST ONLY BE USED IN THE FORWARD FACING POSITION, FITTED FACING TOWARD THE FRONT OF THE STROLLER.
- SECURE EACH CHILD USING THE INFANT CARRIERS HARNESS AT ALL TIMES.
- DO NOT LEAVE CHILDREN IN THE INFANT CARRIERS FOR EXTENDED PERIODS.
- THE INFANT CARRIERS ARE DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE INFANT CARRIER OR INFANT CARRIERS MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS PRODUCT IS NOT TO EXCEED 9KG.

NOTE: THE FOLLOWING INSTRUCTIONS ARE FOR FITTING AND REMOVAL OF INFANT CARRIER ON THE STROLLER FRAME ONLY.

SEE SECTION 4.15 FOR FITTING A SECOND INFANT CARRIER TO THE SECOND SEAT FRAME.

FOR PROPER USE OF INFANT CARRIER IN THE CAR PLEASE FOLLOW THE INSTRUCTION BOOK WHICH COMES WITH THE INFANT CARRIER.

3.2 INFANT CARRIER FITTING & REMOVAL

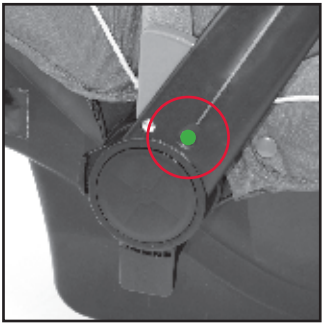

A Remove Stroller seat or Bassinet from frame, (see sections 1.14 (B) & 2.3 (O)). The Infant Carrier must face the Stroller handle. With the Infant Carrier handle in the upright position, locate the Infant Carrier handle mouldings on either side, directly over the frame mouldings. Notice the indicator is GREEN.

B Push down on the Infant Carrier and make sure it is located in the frame mouldings. The Infant Carrier now needs to be locked securely in frame.

C By squeezing in and holding the latches on either side of the handle, rotate the handle backwards. The GREEN Indicator will now turn to RED.

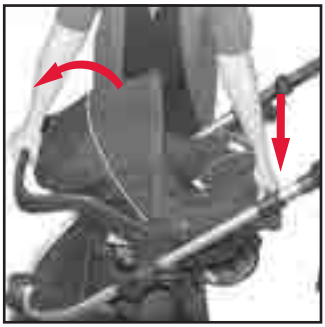

D Release the handle latches. Then with one hand holding the front of the Infant Carrier, push the Infant Carrier handle all the way down until you hear it lock into the frame.

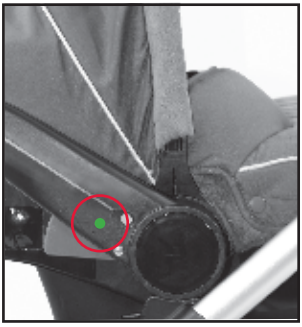

E The handle indicator should now be GREEN and the Infant Carrier should be locked into the frame. If indicator is RED the Infant Carrier handle is not in the locked position, repeat step D

F IMPORTANT:
Pull up on both sides of the Infant Carrier and confirm it is locked into the frame. If not locked in on both sides, repeat steps A to E.

G Secure your baby into the Infant Carrier by the harness provided. (Refer to Instruction manual that comes with Infant carrier).

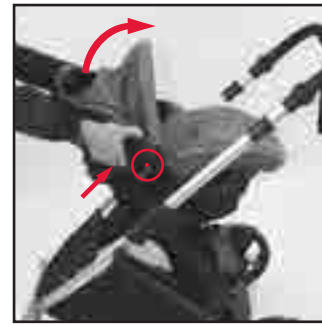

H To remove the Infant Carrier, squeeze both handle latches in to release the locks. The indicator will now be RED.

I Continue to rotate the handle forward until it returns to the upright position. Release the latches, the indicator should now be GREEN.

J Lift and remove the Infant Carrier away from the Stroller.

4.1 SECOND SEAT WARNINGS (Optional Accessory)

⚠WARNINGS:

PLEASE FOLLOW THESE WARNINGS IF YOU ARE USING THESE ACCESSORIES.

- DO NOT USE THIS SEAT WITH ANY OTHER MODELS OF STROLLER.
- THE SECOND SEAT TO BE USED ONLY IN FORWARD FACING POSITION. THAT IS CONNECTED TO THE REAR OF THE STROLLER.
- THE SECOND SEAT MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STROLLER.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS PRODUCT IS NOT TO EXCEED 17KG.
- OVERLOADING WILL CAUSE THE STROLLER TO TIP BACKWARDS. DO NOT OVERLOAD.

4.2 SECOND SEAT PARTS

SS1. Second Seat assembly
SS2. Second Seat engaging pins (2)
SS3. One hand, 4 position reclining backrest
SS4. Adjustable /removable canopy
SS5. Canopy Release Buttons
SS6. Adaptors (2)
SS7. Head Pillow
SS8. Shoulder pads (2)
SS9. Second Seat leg tube

4.3 FITTING SECOND SEAT TO THE STROLLER

NOTE: For easier installation, rotate the Pivotal Handle in the most upright position.

A Remove the Accessory Bag if fitted. Apply the Stroller brake, rotate the pivot handle up to create more assembly space. Adjust the Stroller seat to the most upright position.

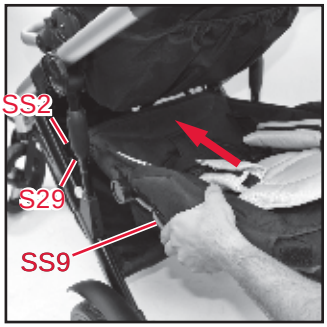

B The Second Seat connecting pins (SS2) need to lock into the frame mouldings (S29). Hold the Second Seat frame so the leg tube (SS9) is underneath and facing the head end of the Second Seat.

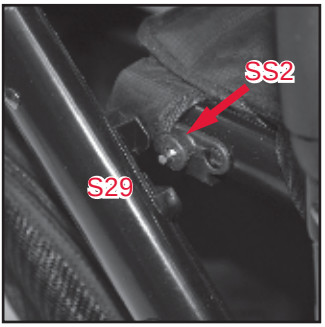

C While holding the Second Seat, hook the connecting pins (SS2) into the frame mouldings (S29), then pull downwards.

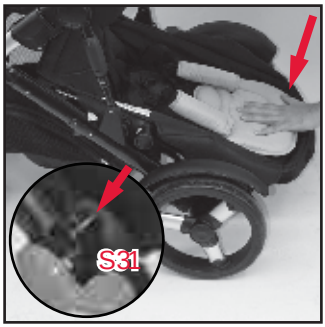

D Lower the Second Seat frame and push down to lock the legtubes (SS9) into the lower Stroller frame mouldings (S31). Repeat step D if the frame doesn't lock into place.

E Pull up on the Second Seat frame to make sure it is locked onto the Stroller frame. Ensure to grasp the Second Seat frame as shown above.

F Raise the backrest adjusting lever and lift the head end of the Second Seat so that the foot end slides down the Stroller frame and engages into the second lock (S30).

4.4 TO ADJUST INTO SEATING POSITIONS

A Adjust to desired seating position by using the one hand backrest adjusting lever. Lift the lever all the way up and at the same time, lift up on the seat.

B The seat will slide up and down the frame. Lock into any one of 4 seating positions by releasing the backrest adjusting lever and allow the seat to engage at the desired position.

4.5 TO FIT, USE & REMOVE THE CANOPY

A To attach the canopy, insert the canopy mouldings onto the frame mouldings until they snap in.

B Attach the canopy hook strips to the pile strips around the top of the frame for a secure fit.

C To adjust the canopy, open by pulling forward, or close by pushing it backward. To remove the canopy see section 4.15(C).

4.5 TO FIT, USE & REMOVE THE CANOPY cont...

D To expose the mesh section of the canopy, unzip the center section.

E The zip should be fully unzipped to expose the center mesh section. Use the fabric to expose or enclose the mesh section.

4.6 HARNESS ADJUSTMENT

WARNING: USE THIS HARNESS AT ALL TIMES. WHEN NOT IN USE ALWAYS DISCONNECT THE SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.

NOTE: A five-point harness is provided to restrain your child. Buckle tongues separate for added safety. To reconnect buckle tongues and to secure the child in the harness, please follow the following steps carefully.

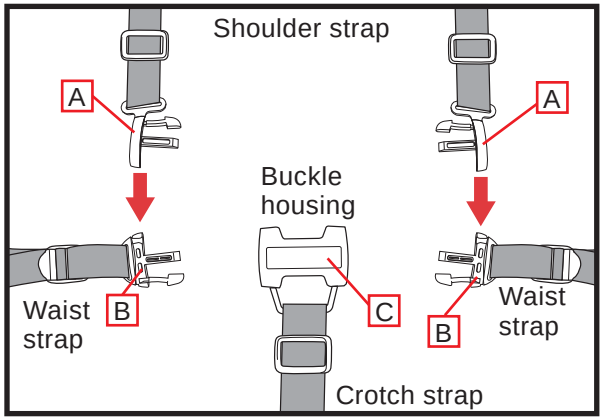

A Position the shoulder strap tongue (A) on the top of the waist buckle tongue (B) on both sides one side at a time.

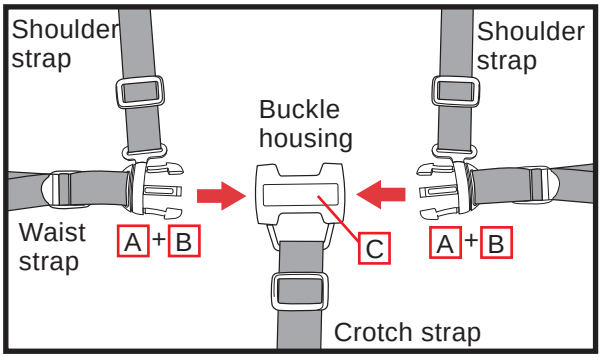

B Push the buckle tongues combinations (A+B) into the buckle housing (C) until the buckle tongues lock into position.

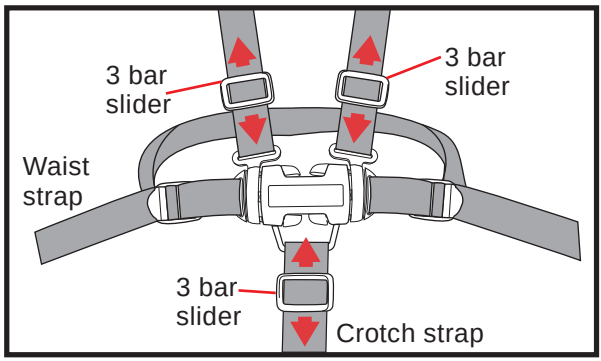

C Tighten or loosen shoulder and crotch straps by sliding up and down the 3 bar sliders.

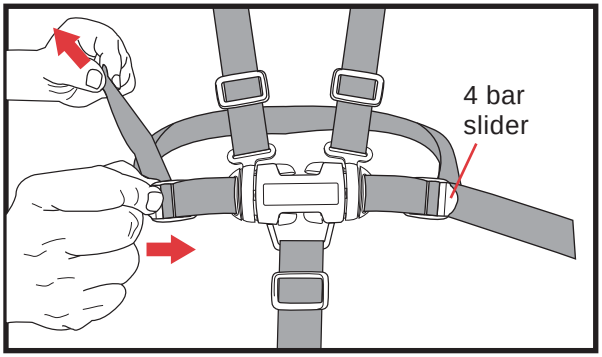

D Tighten or loosen the waist straps, hold and lift the 4 bar slider and then pull the harness strap, to adjust to the desired fit.

E The waist strap needs to fit firmly around the child. Always adjust the harness strap when changing the seating position of the child.

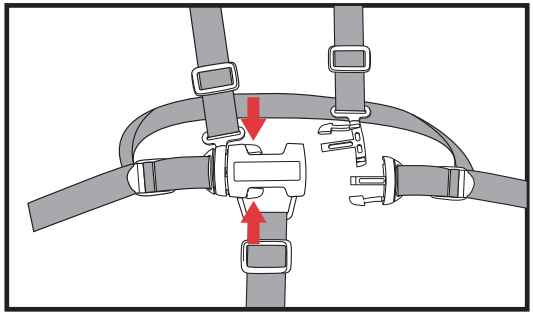

F To release the buckle, carefully squeeze the top and bottom buckle tongues.

4.6 HARNESS ADJUSTMENT cont...

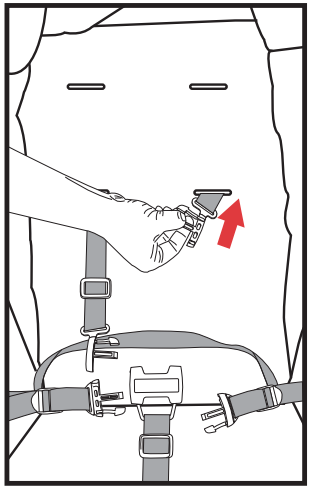

G The second seat has 2 sets of harness slots at different heights to accommodate the child. To change the shoulder harness height, push the shoulder harness tongue out of the current harness slot and through the back of the seat fabric.

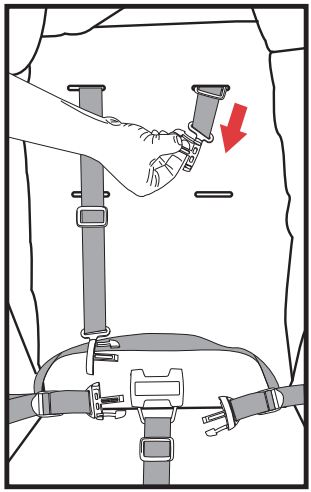

H To reposition harness, pull the shoulder buckle tongue through the desired slot.

4.7 ADJUSTING THE HEAD PILLOW HEIGHT POSITION

A The head pillow has a small height adjusting range. Attach to the best suited hook and pile position as required.

4.8 TO USE THE REVERSIBLE SHOULDER PADS

A Fit the reversible shoulder pads by fitting around the harness shoulder strap and attach the hook and pile.

B Repeat for the other reversible shoulder pad.

C The reverse side of the shoulder pad has a different fabric pattern. To reverse, undo the hook and pile and reattach on the reverse side.

4.9 TO FIT THE BOOTCOVER

C Fit the boot cover inside the basket over the bottom part of the second seat and connect hidden magnet on the boot cover with hidden magnet on the side of the second seat.

4.10 FOLDING THE SECOND SEAT WITH THE FRAME

CAUTION: Remove the child from the Second Seat before folding.

NOTE: Fold the Second Seat before folding the Stroller.

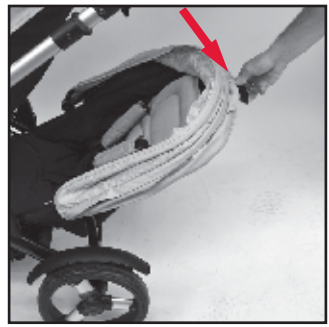

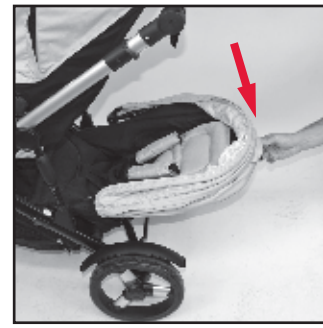

A Fold the canopy back, then fully lift up the backrest adjusting lever and lower the Second Seat to the lowest position.

D While still holding the backrest adjusting lever up, press the safety lock button (S30), and continue to lower the head end of the Second Seat.

E Continue to lower the Second Seat, the foot end of the Second Seat will slide up the frame to the folded position.

F The Second Seat is shown in the fully folded position above. To fold the Stroller frame see section 1.28.

NOTE: You will need to adjust the Stroller pivot handle see section 1.9 to ensure no damage is caused to the Stroller.

4.11 REMOVING THE SECOND SEAT FROM THE FRAME

CAUTION: Remove the child from the Second Seat before folding.

A First, fold the Second Seat up under the frame - see section 4.10.

B With the Second Seat in the folded position, locate the release buttons (SS5) on the sides of the Second Seat frame.

C Wrap your hands around the Second Seat Frame and fully depress the release buttons until you see the adjacent buttons pop out of the mouldings.

D The adjacent buttons pop out of the mouldings when the release buttons are fully depressed.

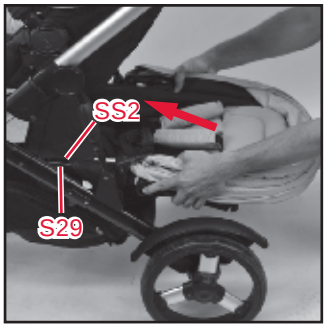

E A gentle upward, then forward motion (as indicated by the arrow) will be required to release the Second Seat connecting pins (SS2) out of the frame mouldings (S29).

F Lift the second seat out and away from the frame.

4.12 TO USE THE ADAPTORS

NOTE: Adaptors are supplied to create more space if required, when using the Second Seat or Infant Carrier on Second Seat frame.

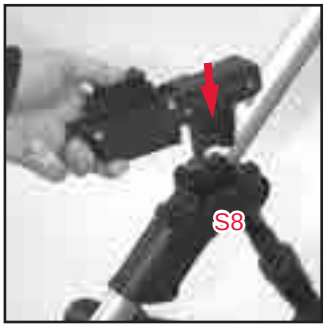

A Align the adaptor with the Stroller frame mouldings as the adaptor extends towards the front of the Stroller and the ribbed section of the mouldings face inwards.

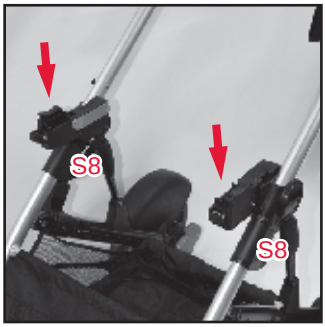

B Press down on the adaptors to lock into the Stroller frame mouldings (S8).

C Pull up on the adaptors to make sure they are locked on.

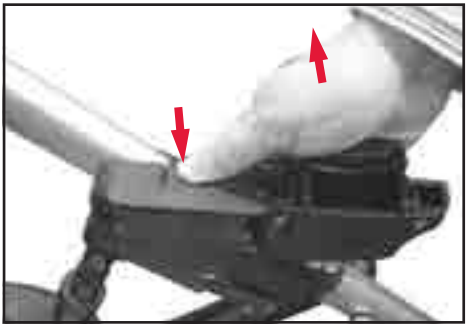

D To remove the adaptors, push down and hold the button, then pull the adaptor up and out of the moulding.

4.13 TO INSTALL THE STROLLER SEAT USING THE ADAPTORS

A Lock the Stroller seat into the adaptors in the forward facing position.

B Adjust the Stroller backrest angle as required.

CAUTION: Stroller seat must be correctly attached, see fitting and removal sections 1.11 & 1.14.

4.14 TO INSTALL THE INFANT CARRIER USING THE ADAPTORS

A Lock the Infant Carrier into the adaptors, with the Infant Carrier facing towards the Stroller handle.

B Pull up on the Infant Carrier to make sure it is locked in.

CAUTION:

Infant Carrier must be correctly attached, see fitting and removal, section 3.2 & 4.12.

DO NOT install the Infant Carrier in a forward facing position, even when used in conjunction with the Second Seat. The Infant Carrier must always face rearward.

4.15 FITTING & REMOVING SOFT GOODS FROM SECOND SEAT FRAME

A To fit the infant carrier to the second seat frame, you must first remove the second seat from the stroller and remove the softgoods.

B Lay the Second Seat frame on a flat surface facing upwards. Release hook and loop tabs which attach the canopy to the top of the Second Seat.

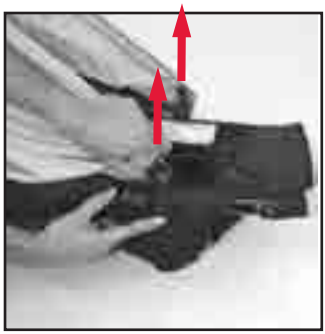

C To remove the canopy, press in and hold the release tabs while pulling the canopy out of the frame mouldings.

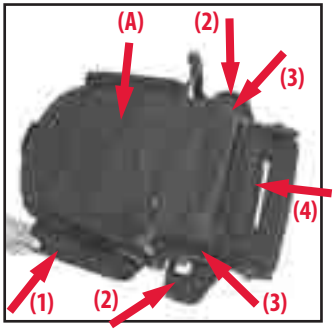

D Turn the Second Seat over so it is facing downwards, then release all the hook and loop tabs.

E Undo the D rung from the bar by sliding the webbing through the slot.

F Release hook and loop tab (1 & 2) on both sides.

4.15 FITTING & REMOVING SOFT GOODS FROM SECOND SEAT FRAME cont...

G Release hook and loop tab on both sides.

H Release hook and loop tab.

I Pull the fabric pocket off from both bottom frame posts.

J Pull the fabric clear of the mouldings and pull the fabric off the frame. The following steps explain how to fit the Second Seat frame to the stroller.

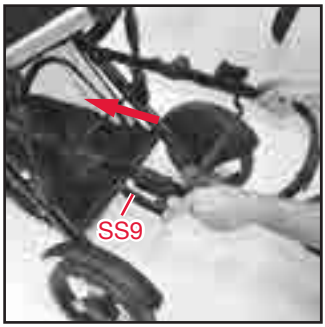

K The Second Seat connecting pins (SS2) need to lock into the frame mouldings (S29). Hold the Second Seat frame so the leg tube (SS9) is underneath and facing the head end of the Second Seat.

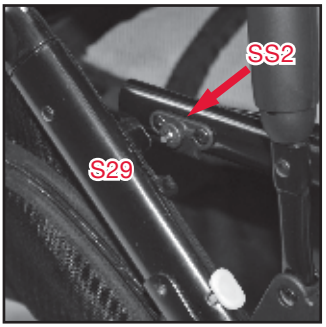

L Hold the Second Seat and hook the connecting pins (SS2) into the stroller frame mouldings (S29), then pull downwards.

4.16 FITTING & REMOVING INFANT CARRIER FROM SECOND FRAME

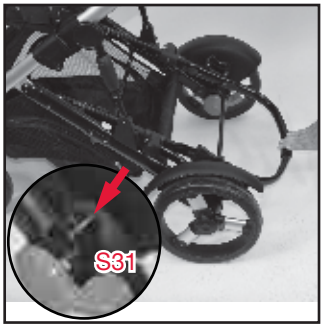

A Lower the Second Seat frame and push down to lock the legtubes (SS9) into the lower Stroller frame mouldings (S31). Repeat step L if the frame doesn't lock into place.

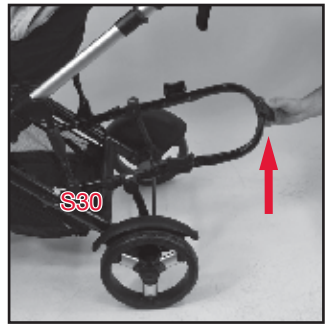

B Raise the backrest adjusting lever and lift the head end of the Second Seat so that the foot end slides down the Stroller frame and engages into the second lock (S30). When locked, frame is slightly above horizontal.

C For easier installation, remove Stroller seat or Infant Carrier from frame, (see sections 1.14 (b) & 3.2 (O)). The Infant Carrier must face towards the front of the stroller. With the Infant Carrier handle in the upright position, locate the Infant Carrier handle mouldings on either side, directly over the second seat frame mouldings. Notice the indicator is GREEN.

D Push down on the Infant Carrier and make sure it is placed in the frame mouldings. The Infant Carrier now needs to be locked securely into the frame.

E By squeezing in and holding the latches on either side of the handle, rotate the handle backwards. The GREEN Indicator will now turn to RED.

F Release the handle latches. Then with one hand holding the front of the Infant Carrier, push the Infant Carrier handle all the way down until you hear it lock into the frame.

4.16 FITTING & REMOVING INFANT CARRIER FROM SECOND FRAME cont...

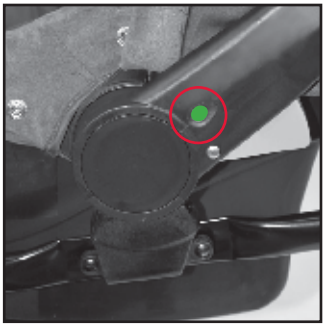

G The handle indicator should now be GREEN and the Infant Carrier should be locked into the frame. If indicator is RED the Infant Carrier handle is not in the locked position, repeat steps E & F.

H IMPORTANT:
Pull up on both sides of the Infant Carrier and confirm it is locked into the frame. If not locked in on both sides, repeat steps E to G.

I Secure your baby into the Infant Carrier by the harness provided. (Refer to the Instruction manual which comes with the Infant carrier).

J To remove the Infant Carrier, squeeze both handle latches in to release the locks. The indicator will now be RED. Rotate the handle forward.

K Continue to rotate the handle forward until it returns to the upright position. Release the latches, the indicator should now be GREEN.

L Lift and remove the Infant Carrier away from the Second Seat frame.

Note: To create more space when the infant carrier is installed on the Second Seat frame, you can use the adaptors on the stroller frame to support the Stroller Seat or second Infant Carrier.

4.17 REFIT THE SOFTGOODS TO THE SECOND SEAT FRAME

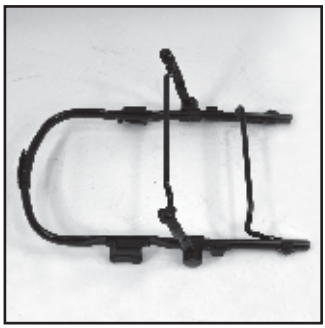

A Lay the Second Seat frame on a flat surface as shown above.

B Pull the fabric over the frame.

C Ensure the latch at the top of the frame is pulled through the cutout in the fabric cover.

D Stretch the bottom of the cover to refit the fabric pocket on the bottom frame post. Repeat for both sides.

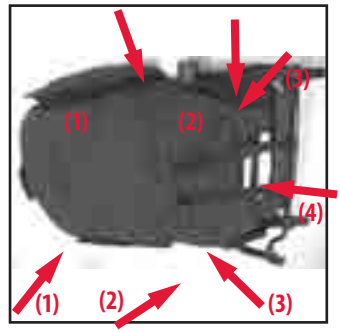

E Re-attach all the hook and loop tabs and pull the mouldings through the holes in the softgoods.

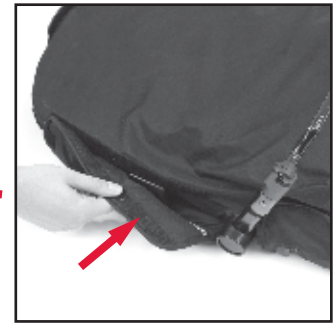

F Attach hook and loop tab (1) on both sides.

4.17 REFIT THE SOFTGOODS TO THE SECOND SEAT FRAME cont...

G Attach hook and loop tab (3) on both sides.

H Attach hook and loop tab (2) on both sides making sure the canopy moulding on the top side of the frame is exposed.

I Attach the D ring and webbing around the bar by sliding the webbing through the D ring slot.

J Turn the Second Seat over so it is facing upwards. To attach the canopy, insert the canopy mouldings onto the frame mouldings until they snap in.

K Attach the canopy hook strips to the pile strips around the top and sides.

NOTE: Removal of the Second Seat softgoods is the reverse instructions of the above procedure.

STROLLER FOLDING CONFIGURATIONS

The following are recommended configurations for storage and transportation in a vehicle.

Shown with second seat (optional accessory, sold separately).

Note: The easiest method is to remove the top seat and optional accessories from the stroller frame and place the accessories and stroller frame into the vehicle separately.

Stroller frame only

Stroller seat

Second seat

CAUTION: The Stroller can be folded with the top seat and second seat attached to the stroller frame, however caution must be taken when lifting the stroller because of the overall weight.

Stroller frame
+ Second seat

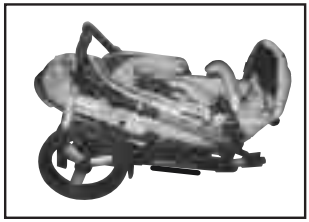

Stroller frame + seat
+ Second seat

Note: The Stroller pivot handle is required to be place into the regular or highest lockable position (see section 1.9).

This will prevent the handle from coming into contact with the second seat and causing damage to the Stroller.

If the tension is to hard DO NOT force, re-open the Stroller and ensure the Stroller pivot handle is set to the highest point.

CARE AND MAINTENANCE

- To prolong the life of your stroller and accessories keep it clean and do not leave it in the direct sunlight or in the car boot for extended periods of time.

- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.

- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.

- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.

- When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and salt will cause premature wear and corrosion.

- If the wheels or suspension squeak, use a silicon based spray ensuring it penetrates all of the wheel and axle or suspension assembly parts.

- If there are compression marks on the tyres - Use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.

- Always check parts regularly for tightness of screws, nuts, and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

youtube.com/user/BritaxChildcare

facebook.com/steelcraft

twitter.com/britaxaustralia

britax.com.au

1300 303 330

BRITAX CHILDCARE PTY. LTD. A Britax International Company ABN 55 006 773 6000
99 Derby Road, Sunshine, Victoria, 3020, Australia

Britax Childcare Pty Ltd (Customer Service 1300 303 330)
Britax Childcare (NZ) Ltd (Customer Service 0508 688 822)
For our entire Steelcraft product range, visit www.britax.com.au
Due to the variations in style and design of our products, the illustrations used in this instruction booklet are generic.
We reserve the right to alter these products without notice.
Fabric and colour may vary from images shown.
The Steelcraft, Compact, Strider ad Strider Plus trademarks are the property of Britax Childcare Pty. Ltd. - Australia
The Britax Trademark is the property of Britax Excelsior Limited - UK.
©2012 Patent apply. Patents pending.
* Excludes accessories

Britax | Steelcraft

Art No.4001309